

Direct, Indirect & Solar Un-Plumbed Unvented Cylinder Installation & Maintenance Manual



**REGISTER THIS PRODUCT
ONLINE WITHIN 28 DAYS OF
COMMISSIONING**

UNITED KINGDOM / IRELAND



<https://register-products.joule.ie>



INS-JUKCYL-019

Safety Information

This appliance can only be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. This manual includes the installation of an unvented water storage vessel.


- The water may drip from the discharge pipe of the pressure-relief device, so this pipe must be left open to the atmosphere.
- The pressure-relief device is to be operated regularly to remove lime deposits and to verify that it is not blocked.
- For an appliance intended to be permanently connected to the water mains and not connected by a hose-set, this shall be stated.
- A discharge pipe connected to the pressure relief device installed in a downwards direction and in a frost-free environment
- This appliance needs to be connected to the electricity supply with all poles disconnection.



Please read maintenance section in this manual before use

Warranty Card

Please register your product online



MUST BE COMPLETED AND
THEN REGISTERED ONLINE TO
COMPLETE WARRANTY

Homeowner
Name

Address

Contact Tel.

Contact Email

Installer
Name

Address

Contact Tel.

Contact Email

Product	Product Installed	Serial Number		Installation Date
Cylinder	<input type="radio"/>		Located on cylinder badge	
Solar Thermal	<input type="radio"/>		Take from solar controller	
Solar PV	<input type="radio"/>		Ser. No. from String / Micro Inverter	
Air Source Heat Pump	<input type="radio"/>		Located on external heat pump badge	
Integrated Heat Pump and Cylinder	<input type="radio"/>		Located on cylinder badge	
Underfloor Heating	<input type="radio"/>		Project ref. on supplied schematic	
Direct Gas Fire Cylinder	<input type="radio"/>		Located on cylinder badge	
Was a Pre-Plumbed cylinder installed too?	<input type="radio"/>	If installed, please fill out the Heat Pump Commissioning Sheet too		

Joule Advance Installer

☐

I accept the terms and conditions in the installation manual

☐

Joule Product Warranty Terms & Conditions

Joule Unvented Cylinder

The **JOULE** stainless steel vessel carries a fully transferable 25-year guarantee against faulty materials or manufacture provided that:

- It has been installed in the United Kingdom or the Republic of Ireland as per the instructions provided in the installation manual provided with the cylinder and in accordance with all of the relevant standards, regulations and codes of practice in force at the time.
- It has not been modified in any way, other than by JOULE
- It has not been misused, tampered with or subjected to neglect.
- The system is fed from the public mains water supply.
- It has only been used for the storage of potable water.
- It has not been subjected to frost damage.
- The unit has been serviced annually.
- The Service Log Book has been completed after each annual service.
- The warranty card is filled in and a copy is sent by email to **warranty@joule.ie**

Exclusions

The guarantee does not cover cylinders affected by the following;

- The effects of scale build up on the cylinder.
- Any labour charges associated with replacing the unit or its parts.
- Any consequential losses caused by the failure or malfunction of the unit.

Please note that invoices for servicing may be requested to prove that the unit has been serviced annually.

Unvented Kit & Other Components

The expansion vessel and cold water controls supplied with JOULE models carry a 2-year guarantee. All other components that are fitted to, or supplied, with the unit carry a 2-year guarantee.

Warning To The User

- Do not remove or adjust any part of this unvented water heater.
- If the unvented water heater develops fault, such as a flow of water from the discharge pipe switch the heater off.
- In all cases contact a competent installer.
- The Benchmark Log Book at the end of the manual must be filled in at annual service.

Warning To The Installer

- Read the installation instructions before commencing.
- Unvented water heaters are a controlled service as defined in the latest edition of the Building Regulations and should only be fitted by a competent installer.
- The installation is subject to approval.
- You must notify the local authority of intention to install.
- After installation the instructions manual must be completed and left with the householder.
- Use only manufacturer's recommended replacement parts.

Installed by

Installer Name	
Address	
Contact Tel.	
Completion Date	

Table Of Contents

Introduction	7	Un-Plumbed Cylinder Schematic	
General Requirements	12	• Mechanical Diagram Y-Plan.....	44
Unvented Kit Components	16	• Electrical Diagram Y-Plan	45
Unvented Kit Checklist.....	17	Electronic Controls.....	46
Product Group Details	18	Discharge Arrangement.....	47
ErP Product Fiche	27	Commissioning	50
Technical Data	29	Maintenance	51
Unvented Cylinder Guide	30	Taking The Cylinder Out Of Use	53
Direct & Indirect Tech Spec	32	Troubleshooting	54
Slimline Direct & Indirect Tech Spec	34	Stelflow Declaration of Conformity	56
Twin Solar Tech Spec	36	Cyclone Declaration of Conformity.....	60
Horizontal Tech Spec.....	36	Evocyl Declaration of Conformity	64
Plumbing G3 Unvented Kit.....	38	Benchmark Checklist.....	68
Testing	39	Service Record	70
Smart Immersion Functions	40	Notes	72
Immersion Testing	40		
Un-Plumbed Cylinder Schematic			
• Mechanical Diagram S-Plan	42		
• Electrical Diagram S-Plan	43		

Introduction

The instructions are an integral part of the appliance and must be given to the end user on completion of the installation in order to comply with the current regulation.

It is important to carefully read the manual to understand all the information to enable safe installation, use and servicing. These instructions consist of details for installation, servicing, fault finding and replacement of parts for the cylinder purchased.

JOULE will not accept any liability in the event of damage for not complying with the guidance in this instruction manual.

The instructions for this installation manual apply to the range of **JOULE Unvented Cylinders**.

Safety is paramount when installing unvented hot water systems and the following instructions must be adhered to:

- Only certified competent installers can install, commission and service the equipment supplied.
- The cylinder must be used for potable hot water only. Any other applications will be considered incorrect use and JOULE will not be held liable for any losses resulting from such use.
- All installation and maintenance instructions must be observed to ensure the correct operation of the equipment.
- The electric immersion must not be switched on unless the cylinder is completely full of water.
- Domestic hot water may be stored at temperatures exceeding 60°C. Preventative measures should be put in place to negate the possibility of scalding.
- A maintenance schedule should be put in place with a competent person to service the equipment annually to comply with the warranty conditions.
- When servicing the system the mains supply to the cylinder should be isolated.
- Only genuine spare parts should be used. A full list of items with relevant codes can be found on page 15.

The installation must be carried out by a person competent to install unvented hot water systems. The installation must be carried out in accordance with the following recommendations:

All current Building Regulations issued by the Department of the Environment, i.e. Building Regulation G3 (England and Wales), Technical Standard P3 (Scotland) or Building Regulation P5 (Northern Ireland) and the Water Fitting Regulations (England and Wales) or Water Byelaws (Scotland). The installation should also be in accordance with the following British Standard Codes of Practice:

BS 5449:1990 Forced circulation hot water systems

BS 5546:2000 Installation of hot water supplies for domestic purposes

BS 5918:1989 Solar heating systems for domestic hot water

BS 6700:2006 Design, installation, testing and maintenance of services supplying water.

Failure to install this appliance correctly could lead to prosecution and will invalidate the guarantee. It is in your own interest and that of safety to ensure that the law is complied with.

Handling

Care must be taken when transporting, storing and installing the equipment:

- At least two people should lift the cylinder to prevent injuries.
- The cylinder must be stored in a dry area and must never be dropped during handling.
- Packaging should only be removed at the installation location.
- The cylinder must be installed on a level floor with the required load bearing capability. Installation, servicing, maintenance and repair must be carried out by a competent person.
- All electrical wiring must be carried out by a qualified electrician and be installed in accordance with current I.E.E Wiring Regulations.
- A lack of safety devices can lead to potentially fatal injuries, all necessary safety devices must be installed correctly in the system. The use of an electric immersion may lead to the build up of electrical potential in the water. This can in turn cause corrosion of the immersion. To prevent this, ensure the immersion heater, and the hot and cold pipework are correctly bonded and connected to the earth line.
- If plastic pipes are used they must be approved temperature resistant to 95°C at a pressure of 10bar.

A thermostatic mixer should be installed in the system to prevent the risk of scalding. If there are leaks found in the system, shut off the cold water stop valve from the main supply and contact a competent person immediately.

What Is Benchmark?

Benchmark places responsibilities on both manufacturers and installers. The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations.

The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference. Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hot Water Industry Council who manage and promote the scheme. Visit www.centralheating.co.uk

HWA Charter Member

Joule are proud to be a charter member of the the Hot Water Association (HWA), that has been formed through the union of the two UK industry trade bodies, WMA (Water Heater Manufacturers Association) and MODUS (Manufacturers Of Domestic Unvented Systems).

The objectives of the HWA are "To be recognised as the leading body in domestic hot water storage and, through cooperation and partnerships, to support, drive and promote the sustained growth and improvement of standards within the entire domestic hot water industry".

The HWA operate a Charter that all members of the association observe.

The HWA Charter Statement requires that all members adhere to the following:

- To supply fit for purpose products clearly and honestly described
- To supply products that meet or exceed appropriate standards and Building And Water Regulations
- To provide pre and post technical support
- To provide clear and concise warranty details to customers

Water Supply

The performance of any unvented system is only as good as the mains water supply available. To this effect the maximum possible water demand should be assessed, with the knowledge that the mains supplies both hot and cold services simultaneously. The water heater itself operates at a pressure of 3bar, controlled by the inlet control set, and is capable of delivering over 50 litres per minute. The high quality inlet control set has been designed to make the most of the low rates available.

The water supply should be checked to ensure it can meet these requirements. If necessary, consult the local water authority regarding the likely pressure and flow rate availability.

Consideration should be given to upgrading existing 1/2" (15mm) cold mains pipework to a larger size if the recommended minimum pressure / flow rate is not being achieved. JOULE recommend that primary pipework used has a minimum diameter of 22mm to ensure low pressure loss.



A high static (no flow) mains pressure is no guarantee of good flow availability. In a domestic installation 1.5bar and 25ltr/min should be regarded as the minimum. The maximum mains pressure that the inlet control set can cope with is 10bar.

Introduction

Change Of Water Supply

The changing or alternating from one water supply to another can have a detrimental effect on the operation and/or life expectation of the water heater storage cylinder, pressure temperature relief valve and heating unit.

Where there is a changeover from one water supply to another, e.g. a rainwater tank supply, bore water supply, desalinated water supply, public reticulated water supply or water brought in from another supply, then water chemistry information should be sought from the supplier or it should be tested to ensure the water supply meets the requirements given in these guidelines for the Joule warranty to apply.

Water Chemistry

This water heater must be installed in accordance with this advice to be covered by the Joule warranty. This water heater is manufactured to suit the water conditions of most public reticulated water supplies. However, there are some known water chemistries which can have detrimental effects on the water heater and its operation and/or life expectancy. If you are unsure of your water chemistry, you may be able to obtain information from your local water supply authority. We recommend not to use water softener, however if it is used the water is required to be kept at potable standards. This water heater should only be connected to a water supply which complies with these guidelines for the JOULE warranty to apply.

Water Chemistry Levels Affecting Warranty

The JOULE warranty of this water heater will not cover resultant faults on components including the storage cylinder where water stored in the storage cylinder exceeds at any time any of the following levels:

Components	Maximum Permitted Levels
Total Dissolved Solids	600 mg/litre
Total Hardness	200 mg/litre
Chloride	300 mg/litre
Magnesium	10 mg/litre
Calcium	20 mg/litre
Sodium	150 mg/litre
Iron	1 mg/litre
Maximum pH	9.5
Minimum pH	6.5

Total Dissolved Solids (TDS)

Some water analysis reports may state the conductivity of the water rather than the level of total dissolved solids. Conductivity, measured in microsiemens per centimetre ($\mu\text{S}/\text{cm}$), is directly proportional to the TDS content of the water. TDS, in mg/L , is approximately 70% of the conductivity in $\mu\text{S}/\text{cm}$.

The JOULE warranty will not cover resultant faults to the storage cylinder if this water heater is connected at anytime to a water supply where the TDS content of the water exceeds $600 \text{ mg}/\text{L}$.¹⁶ In locations where TDS approaches $600 \text{ mg}/\text{L}$, e.g. due to sediment, we strongly recommend fitting an appropriate filter to ensure water entering or in the water heater does not exceed this level at any time i.e. due to sediment build up.

Features Of The Unvented Cylinder

- Made from Duplex Stainless Steel for excellent corrosion resistance.
- Strong rust-proofed steel case.
- Insulation is by means of an approved CFC/HCFC free polyurethane foam with an ozone depletion factor of zero.
- Available in a variety of sizes to suit - 90L, 120L, 150L, 180L, 210L, 250L and 300 litres.
- All models including Solar models are available in Twin coil versions supplied complete with all the necessary safety and control devices needed to connect to cold water mains
- All safety and control devices are pre-set.
- High quality controls selected that combine high flow rate performance with minimum pressure drop which gives fantastic performance in all areas, with great improvements in areas with poor water pressure.

General Requirements

Wellmaster Cylinders

Only JOULE Wellmaster cylinders may be installed on a well, private water scheme or any water source that does not come from the public mains.

Water supplied to the cylinder must conform to the water chemistry table on the previous page. A descaler on the cold water feed may be used if required.



If any of the water parameters are higher than set out in the table including total hardness regardless of whether or not it is fed from a main water connection a joule Wellmaster cylinder must be used.

If any of the water parameters are higher than set out in the table including Total Hardness regardless of whether or not it is fed from a main water connection a JOULE Wellmaster cylinder must be used.

Siting The Unit

This unit can supply outlets above it or at some distance from it but any outlets above the unit will reduce the available outlet pressure by 0.1 bar for every 1m of height difference. The maximum length of the “dead leg” should be as stated in the Water Supply (Water Fittings) Regulations 1999 G18.7, in particular to the area of most frequent use.

Particular attention is needed if siting in a garage or outbuilding as the unit should be protected from frost. All exposed pipework must be insulated. The unit must be installed **upright** on a base capable of supporting its weight when full.

Sufficient access to allow maintenance of the valves should be considered. In addition the immersion heaters are 400mm in length and this distance should be considered to allow withdrawal for servicing if required. The discharge pipework from the safety valves should fall continuously and terminate safely.

Negative pressure may form in cylinders installed very high in a building. To counteract this, an anti-vacuum valve can be installed to prevent damage to the cylinder. The anti-vacuum valve ensures pressure compensation as a result of air flowing into the cylinder.

Connecting To The Cylinder

All of the pipework connections on the cylinder are female threaded. Upon filling / commissioning, ensure all connections are completely watertight.



No control or isolation valve should be fitted between the expansion relief valve and the storage cylinder. The relief valve connections should not be used for any other purpose.

Cold Mains Pipework

Run the cold main through the building to the place where it is to be installed. Take care not to run the cold pipe near hot water or heating pipe work so that the heat pick-up is minimized. Identify the cold water supply pipe and fit an isolating valve (not supplied). A 22mm BS1010 stopcock can typically be used but a 22mm quarter turn full bore valve would be better as it does not restrict the flow as much. Do not use "screwdriver slot" or similar valves.

Make the connection to the cold feed of the cylinder and incorporate a drain valve. Position the inlet control just **above** the Temperature & Pressure Relief Valve (TPRV) mounted on the side of the cylinder. This ensures that the cylinder does not have to be drained down in order to service the inlet control set. Ensure that the arrow points in the direction of the water flow. Select a suitable position for the expansion vessel. Mount it to the wall using the bracket provided.

Balanced Cold Connection

If there are to be showers, bidets or monobloc taps in the installation then a balanced cold supply is necessary. There is a 22mm balanced connection on the inlet control set.

Fitting The Inlet Control Group

Excess pressure can lead to the cylinder bursting. The inlet control set supplied has an expansion relief valve with a 15mm connection to allow it to be connected to the tundish. Make sure that there is sufficient space for future maintenance and also for connection of the discharge pipe for the expansion relief valve.

It is essential that this connection is not covered or closed. The hot water expansion vessel should be hard fixed into pipework and insulated.

Hot Water Pipework

Run the first part of the hot water distribution pipework in 22mm. This can be reduced to 15mm and 10mm as appropriate for the type of tap etc. Your aim should be to reduce the volume of the hot draw-off pipework to a practical minimum so that the time taken for the hot water is as quick as possible.

Do not use monobloc mixer tap or showers if the balanced cold connection is not provided. Outlets of this type can back pressurise the unit and result in discharge.

Expansion Vessel

The expansion vessel receives the increased water volume when expansion takes place as the system heats up and it maintains a positive pressure in the system. The expansion vessel contains a flexible diaphragm, which is initially charged on one side with nitrogen, but can be topped up with air when required.

Select a suitable position for the expansion vessel. Mount it to the wall using the bracket provided and hard fix into pipework and insulate. Ensure that the top of the vessel is accessible for servicing. The pipe connecting the expansion vessel to the system should have a diameter of not less than 15mm and must not contain any restrictions.

General Requirements

Prior to connecting the expansion vessel to the system the pipework should be flushed and tested. When the vessel is connected the system should be pressurised when cold. If the initial system water pressure is too high, the diaphragm will be displaced too far into the vessel. This will leave the vessel unable to accommodate the volume of expansion water. The result of this is an increase in system pressure and the safety valve will lift.

Primary Coil Connections

Connect the primary connections (Indirect only). The primary circuit must be positively pumped. Either primary connection may be used as the primary flow. Reheat times are identical either way. The primary circuit can be open vented or sealed, with up to a maximum pressure of 3.5 bar. If you seal the primary circuit an additional expansion vessel and safety valve is required.

The boiler may be Gas, Electric or Oil but must be under effective thermostatic control. Uncontrolled heat sources such as some AGA's, back boilers, solid fuel stoves, etc. are **not suitable**. Please contact our Technical department for guidance. Connect the two port zone valve (indirect only) into the primary flow pipework. The direction of flow arrow should be towards the primary flow connection.

Installing The Two Port Motorised Valve

The function of the Two Port Motorised Valve prevents the cylinder from overheating. It can be installed on either horizontal or vertical pipework.

If it is mounted onto horizontal pipework the valve head must face upwards. The direction of flow is marked on the body of the valve with arrows.

Thermostatic Mixer

When installing a solar system with an unvented JOULE twin coil cylinder, a thermostatic mixing valve should be installed. Its function is to act as an anti scald protection. The thermostatic mixer is to be set to a temperature of between 30°C and 60°C and is supplied by the installer.

Secondary Circulation

On larger installations long pipe runs to draw-off points can cause significant volumes of water to be drawn off before an acceptable temperature can be reached. Secondary pumped circulation using a stainless steel or a bronze pump, and combined with effective time and temperature controls can overcome this problem. Where secondary return circulation is required the pipework should be run in 15mm pipe. A suitable WRAS approved stainless steel or bronze circulation pump must be used. A check valve must also be installed to prevent back flow.

On large secondary circulation systems it may be necessary to incorporate an extra expansion vessel into the circuit to accommodate the increased system water volume. Secondary circulation should be avoided on Direct electrically heated units being used on off-peak electricity tariffs. It should be noted that the use of a secondary circulation circuit can increase running costs as there will be circulation pipe losses. High levels of insulation on secondary pipework are required to keep energy losses to a minimum.

Dead Legs

The length of hot water draw off to taps and other outlets should be kept to a minimum to reduce the amount of cold water drawn off before the hot water arrives. The maximum recommended dead leg lengths are shown in the table below. Where there is more than one size of pipe on a dead leg, the equivalent length and size should be estimated. Where the dead leg length exceeds the recommended maximum, secondary circulation should be installed. It should be controlled by a time switch and incorporate a motorized valve that can prevent gravity circulation in the circuit.

Pipe Size (mm)	Maximum Length (m)
10, 12	20
15, 22	12
28	8
35 and above	3

System Noise

Noise in pipework may occur as a result of expansion of pipework over joists or where the pipe has been left touching other pipes or a part of the building structure. Care must be taken to ensure that the pipework is correctly bracketed, is not in tension or compression, and does not carry the weight of components such as a circulation pump.

Setting The Hot Water Temperature

The hot water temperature is set on the dual thermostat by the competent person during the installation. The dual thermostat should be set to 60°C. If you are heating water in the cylinder for the first time, or the time controls for the DHW zone have been off for a prolonged period of time, the cylinder may take additional time to heat up.



Inappropriate adjustments can lead to the damages in the system. If any changes are made to the cylinder, the controls, the water and power supply lines or the expansion relief components there is a risk of steam escaping or rupture to the system.

Unvented Kit Components



TZ9-7.0-0000.5



TV-PO-0000012L TV-
PO-0000019L
TV-PO-0000024L



TZC-D-0000000Z



TZU-000015X022




TzM-I-000022MM



TZG-3.0-00.75L



TI-I-L-14-03-1

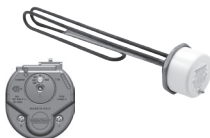

TI-I-L-14-S3-1
Smart

Unvented Kit Checklist

Capacity (ltr)	60	90	120	150	180	210	250	300
Inlet Group	TZG-3.0-00.75L							
Expansion Vessel	TV-PO-0000012L				TV-PO-0000019L			TV-PO-0000024L
T&P Valve	TZ9-7.0-0000.5							
Tundish	TZU-000015X022							
Dual Stat	TZC-D-0000000Z							
Prim. Coil 2-P Z.Valve	TzM-I-000022MM							

Direct	Indirect
Inlet Control Group	Inlet Control Group
Tundish	Tundish
T&P Valve (fitted)	T&P Valve (fitted)
3kW Immersion (fitted)	3kW Immersion (fitted)
Expansion Vessel	Expansion Vessel
	Dual Cylinder Stat
	2-port Zone Valve

Product Group Details

Product Code	Direct	Indirect	Twin Solar	Horizontal
Stelflow	TRSMVD	TRSMVI	TRSMVS	TRSMHI
Cyclone Plus	TRJMVD	TRJMRI	TRJMVS	TRJMRI
Evocyl	TTEMVD	TTEMVI	TTEMVS	TTEMHI

Stelflow Direct

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD VERTICALS	Direct	TRSMVD-0090LFC	90L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0120LFB	120L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0150LFB	150L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0180LFB	180L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0210LFC	210L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0250LFC	250L STEL DIR STD	STELFLOW
	Direct	TRSMVD-0300LFC	300L STEL DIR STD	STELFLOW

SLIM VERTICALS	Direct	TRSMVD-0060SFC	60L STEL DIR SLM	STELFLOW
	Direct	TRSMVD-0090SFC	90L STEL DIR SLM	STELFLOW
	Direct	TRSMVD-0120SFC	120L STEL DIR SLM	STELFLOW
	Direct	TRSMVD-0150SFC	150L STEL DIR SLM	STELFLOW
	Direct	TRSMVD-0180SFC	180L STEL DIR SLM	STELFLOW
	Direct	TRSMVD-0210SFC	210L STEL DIR SLM	STELFLOW

Stelflow Indirect

	Cylinder Range	No.	Description	Product Group Code
STD VERTICALS	Indirect	TRSMVI-0090LFC	90L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0120LFB	120L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0150LFB	150L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0180LFB	180L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0210LFC	210L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0250LFC	250L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0300LFC	300L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0350LFC	350L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0400LFC	400L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0450LFC	450L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0500LFC	500L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0550LFC	550L STEL IND STD	STELFLOW
	Indirect	TRSMVI-0600LFC	600L STEL IND STD	STELFLOW
SLIM VERTICALS	Indirect	TRSMVI-0060SFC	60L STEL IND SLM	STELFLOW
	Indirect	TRSMVI-0090SFC	90L STEL IND SLM	STELFLOW
	Indirect	TRSMVI-0120SFC	120L STEL IND SLM	STELFLOW
	Indirect	TRSMVI-0150SFC	150L STEL IND SLM	STELFLOW
	Indirect	TRSMVI-0180SFC	180L STEL IND SLM	STELFLOW
	Indirect	TRSMVI-0210SFC	210L STEL IND SLM	STELFLOW

Stelflow Twin Solar

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD VERTICALS	Twin Solar	TRSMVS-0120LFB	120L STEL TWN STD	STELFLOW
	Twin Solar	TRSMVS-0150LFB	150L STEL TWN STD	STELFLOW
	Twin Solar	TRSMVS-0180LFB	180L STEL TWN STD	STELFLOW
	Twin Solar	TRSMVS-0210LFC	210L STEL TWN STD	STELFLOW
	Twin Solar	TRSMVS-0250LFC	250L STEL TWN STD	STELFLOW
	Twin Solar	TRSMVS-0300LFC	300L STEL TWN STD	STELFLOW

SLIM VERTICALS	Twin	TRSMVS-0150SFC	150L STEL TWN SLM	STELFLOW
	Twin	TRSMVS-0180SFC	180L STEL TWN SLM	STELFLOW
	Twin	TRSMVS-0210SFC	210L STEL TWN SLM	STELFLOW

Stelflow Horizontal

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD HORIZONTAL	Horizontal	TRSMHI-0120LFB	120L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0150LFB	150L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0180LFB	180L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0210LFC	210L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0250LFC	250L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0300LFC	300L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0400LFC	400L STEL IND HOR STD	STELFLOW
	Horizontal	TRSMHI-0500LFC	500L STEL IND HOR STD	STELFLOW

Cyclone Plus Direct

	Cylinder Range	No.	Description	Product Group Code
STD VERTICALS	Direct	TRJMVD-0090LFC	90L CYC + DIR STD	CYCLONE PLUS
	Direct	TRJMVD-0120LFB	120L CYC + DIR STD	CYCLONE PLUS
	Direct	TRJMVD-0150LFB	150L CYC + DIR STD	CYCLONE PLUS
	Direct	TRJMVD-0180LFB	180L CYC + DIR STD	CYCLONE PLUS
	Direct	TRJMVD-0210LFC	210L CYC + DIR STD	CYCLONE PLUS
	Direct	TRJMVD-0250LFC	250L CYC + DIR STD	CYCLONE PLUS
SLIM VERTICALS	Direct	TRJMVD-0060SFC	60L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0090SFC	90L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0120SFB	120L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0120SFC	120L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0150SFC	150L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0180SFC	180L CYC + DIR SLM	CYCLONE PLUS
	Direct	TRJMVD-0210SFC	210L CYC + DIR SLM	CYCLONE PLUS

Cyclone Plus Indirect

	Cylinder Range	No.	Description	Product Group Code
STD VERTICALS	Indirect	TRJMMVI-0090LFC	90L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0120LFB	120L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0150LFB	150L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0180LFB	180L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0210LFC	210L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0250LFC	250L CYC + IND STD	CYCLONE PLUS
	Indirect	TRJMMVI-0300LFC	300L CYC + IND STD	CYCLONE PLUS
SLIM VERTICALS	Indirect	TRJMMVI-0060SFC	60L CYC + IND SLM	CYCLONE PLUS
	Indirect	TRJMMVI-0090SFC	90L CYC + IND SLM	CYCLONE PLUS
	Indirect	TRJMMVI-0120SFC	120L CYC + IND SLM	CYCLONE PLUS
	Indirect	TRJMMVI-0150SFC	150L CYC + IND SLM	CYCLONE PLUS
	Indirect	TRJMMVI-0180SFC	180L CYC + IND SLM	CYCLONE PLUS
	Indirect	TRJMMVI-0210SFC	210L CYC + IND SLM	CYCLONE PLUS

Cyclone Plus Twin Solar

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD VERTICALS	Twin Solar	TRJMVS-0150LFB	150L CYC + TWN STD	CYCLONE PLUS
	Twin Solar	TRJMVS-0180LFB	180L CYC + TWN STD	CYCLONE PLUS
	Twin Solar	TRJMVS-0210LFC	210L CYC + TWN STD	CYCLONE PLUS
	Twin Solar	TRJMVS-0250LFC	250L CYC + TWN STD	CYCLONE PLUS
	Twin Solar	TRJMVS-0300LFC	300L CYC + TWN STD	CYCLONE PLUS

SLIM VERTICALS	Twin Solar	TRJMVS-0150SFB	150L CYC + TWN SLM	CYCLONE PLUS
	Twin Solar	TRJMVS-0180SFB	180L CYC + TWN SLM	CYCLONE PLUS
	Twin Solar	TRJMVS-0210SFB	210L CYC + TWN SLM	CYCLONE PLUS

Stelflow Horizontal

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD HORIZONTAL	Horizontal	TRJMHI-0120LFB	120L CYC + IND HOR	CYCLONE PLUS
	Horizontal	TRJMHI-0150LFB	150L CYC + IND HOR	CYCLONE PLUS
	Horizontal	TRJMHI-0180LFB	180L CYC + IND HOR	CYCLONE PLUS
	Horizontal	TRJMHI-0210LFC	210L CYC + IND HOR	CYCLONE PLUS
	Horizontal	TRJMHI-0250LFC	250L CYC + IND HOR	CYCLONE PLUS
	Horizontal	TRJMHI-0300LFC	300L CYC + IND HOR	CYCLONE PLUS

Evocyl Direct

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD VERTICALS	Direct	TTEMVD-0090LFB	90L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0120LFB	120L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0150LFB	150L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0180LFB	180L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0210LFC	210L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0250LFC	250L EVO DIR STD	EVOCYL
	Direct	TTEMVD-0300LFC	300L EVO DIR STD	EVOCYL

SLIM VERTICALS	Direct	TTEMVD-0060SFB	60L EVO DIR SLM	EVOCYL
	Direct	TTEMVD-0090SFB	90L EVO DIR SLM	EVOCYL
	Direct	TTEMVD-0120SFB	120L EVO DIR SLM	EVOCYL
	Direct	TTEMVD-0150SFB	150L EVO DIR SLM	EVOCYL
	Direct	TTEMVD-0180SFB	180L EVO DIR SLM	EVOCYL
	Direct	TTEMVD-0210SFC	210L EVO DIR SLM	EVOCYL

Evocyl Indirect

	Cylinder Range	No.	Description	Product Group Code
STD VERTICALS	Indirect	TTEMVI-0090LFB	90L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0120LFB	120L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0150LFB	150L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0180LFB	180L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0210LFC	210L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0250LFC	250L EVO IND STD	EVOCYL
	Indirect	TTEMVI-0300LFC	300L EVO IND STD	EVOCYL
SLIM VERTICALS	Indirect	TTEMVI-0060SFB	60L EVO IND SLM	EVOCYL
	Indirect	TTEMVI-0090SFB	90L EVO IND SLM	EVOCYL
	Indirect	TTEMVI-0120SFB	120L EVO IND SLM	EVOCYL
	Indirect	TTEMVI-0150SFB	150L EVO IND SLM	EVOCYL
	Indirect	TTEMVI-0180SFB	180L EVO IND SLM	EVOCYL
	Indirect	TTEMVI-0210SFC	210L EVO IND SLM	EVOCYL

Evocyl Twin Solar

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD VERTICALS	Twin Solar	TTEMVS-0150LFB	150L EVO TWN STD	EVOCYL
	Twin Solar	TTEMVS-0180LFB	180L EVO TWN STD	EVOCYL
	Twin Solar	TTEMVS-0210LFC	210L EVO TWN STD	EVOCYL
	Twin Solar	TTEMVS-0250LFC	250L EVO TWN STD	EVOCYL
	Twin Solar	TTEMVS-0300LFC	300L EVO TWN STD	EVOCYL

SLIM VERTICALS	Twin Solar	TTEMVS-0150SFB	150L EVO TWN SLM	EVOCYL
	Twin Solar	TTEMVS-0180SFB	180L EVO TWN SLM	EVOCYL
	Twin Solar	TTEMVS-0210SFC	210L EVO TWN SLM	EVOCYL

Evocyl Horizontal

	Cylinder Range	No.	Description	Product Group Code
--	----------------	-----	-------------	--------------------

STD HORIZONTAL	Horizontal	TTEMHI-0120LFB	120L EVO IND HOR STD	EVOCYL
	Horizontal	TTEMHI-0150LFB	150L EVO IND HOR STD	EVOCYL
	Horizontal	TTEMHI-0180LFB	180L EVO IND HOR STD	EVOCYL
	Horizontal	TTEMHI-0210LFC	210L EVO IND HOR STD	EVOCYL
	Horizontal	TTEMHI-0250LFC	250L EVO IND HOR STD	EVOCYL
	Horizontal	TTEMHI-0300LFC	300L EVO IND HOR STD	EVOCYL

ErP Product Fiche Information

Product Code	Direct
Stelflow	TRSMVD
Cyclone Plus	TRJMVD
Evocyl	TTEMVD

Nominal Capacity (litr)		90	120	150	180	210	250	300
Direct Vertical Standard								
Storage volume V (litr)		90	120	150	180	210	250	300
Mixed water at 40°C (litr)								
The declared load profile		M	M	L	L	L	XL	XL
ErP Rating		C	C	C	C	C	C	C
Energy Efficiency (%)		37	37	38	38	38	38	38
Ann. el. consumption (kWh)		1446	1471	2772	2796	2820	4485	4531
Sound Power Level (dB)		16	16	16	16	16	16	16
Thermostat Temp. Set. (°C)		60	60	60	60	60	60	60
Daily En. Usage Qelec (kWh/24h)		6.805	6.955	12.915	13.033	13.195	20.830	21.100

Nominal Capacity (litr)	60	90	120	150	180	210		
Direct Vertical Slim								
Storage volume V (litr)	60	90	120	150	180	210		
Mixed water at 40°C (litr)								
The declared load profile	M	M	M	L	L	L		
ErP Rating	C	C	C	C	C	C		
Energy Efficiency (%)	37	37	37	37	37	38		
Ann. el. consumption (kWh)	1439	1458	1493	1527	1542	2833		
Sound Power Level (dB)	16	16	16	16	16	16		
Thermostat Temp. Set. (°C)	60	60	60	60	60	60		
Daily En. Usage Qelec (kWh/24h)	6.765	6.875	7.085	7.285	7.375	7.465		

ErP Product Fiche Information

Product Code	Indirect	Twin Solar
Stelflow	TRSMVI	TRSMVS
Cyclone Plus	TRJMRI	TRJMVS
Evocyl	TTEMVI	TTEMVS

Nominal Capacity (ltr)	60	90	120	150	180	210	250	300
Indirect & Solar Vertical								
Type	SLIM	STD	SLIM	STD	SLIM	STD	SLIM	STD
Storage Volume V (ltr)	60	90	90	120	120	150	150	180
Standing Loss (W)	38	40	43	46	52	53	60	58
ErP Rating	B	B	B	B	B	B	C	B

Product Code	Horizontal
Stelflow	TRSMHI
Cyclone Plus	TRJMRI
Evocyl	TTEMHI

Nominal Capacity (ltr)			120	150	180	210	250	300
Indirect Horizontal								
Storage Volume V (ltr)			120	150	180	210	250	300
Standing Loss (W)			54	63	71	80	89	90
ErP Rating			C	C	C	C	C	C

Technical Data

Indirect models in conformance with BS EN 12897:2016

Direct models in conformance with BS EN 50440:2015

Maximum mains water supply pressure	1.0MPa (10 bar max)
Operating pressure secondary circuit (PRV Setting)	0.3MPa (3 bar)
Expansion vessel design pressure	0.28MPa (2.8 bar - 0.2 bar below working)
Expansion relief valve setting	0.6MPa (6 bar)
Maximum design pressure of the secondary circuit	0.55MPa (5.5bar)
Maximum Expansion vessel pressure	1.0MPa (10 bar)
T&P relief valve setting	0.7MPa/90 °C (7 bar)
Primary coil maximum design pressure	0.6MPa (6 bar)
Operating pressure of the primary circuit	0.3MPa (3 bar)
Primary flow rate information	15l/min @ 80°C
Immersion heater rating (a.c. supply only) single phase	2kW or 3kW 50/60Hz ~
Storage weights (empty and full)	See Specification Tables
Indirect coil ratings	See Specification Tables
Pressure drop across the indirect coils	See Specification Tables
Coil surface area	See Specification Tables

Unvented Cylinder Selection Guide

L		Kg	Kg		L		nWh%	Mins	W	kWh/ ANNUM	kW	kW
Cap.	Cylinder Range	Weight Empty	Weight Full	Load Profile	Water Vol	ERP Rating	Energy Efficiency	Reheat Time Indirect	Stand. Loss	Ann. Energy Usage	Prim. Coil Rating	Solar Coil Rating
60	Indirect Slimline	21	81		60	B		13.4	38		16.4	
	Direct Slimline	19	79	M	60	C	37		38	1439		
90	Direct	21	111	M	90	C	37		40	1446		
	Indirect	23	109		90	B		14.3	40		15.73	
	Direct Slimline	21	106	M	90	C	37		43	1458		
	Indirect Slimline	23	113		90	B		14.3	43		15.73	
120	Direct	26	146	M	120	C	37		46	1471		
	Indirect	30	146		120	B		19.05	46		15.63	
	Direct Slimline	26	146	M	120	C	37		52	1493		
	Indirect Slimline	30	139		120	B		19.05	52		15.64	
	Horizontal Indirect	30	146		120	C		15.82	54		16.54	
150	Direct	33	183	L	150	C	38		53	2772		
	Indirect	38	184		150	B		23.71	53		16.33	
	Direct Slimline	33	183	L	150	C	37		60	1527		
	Indirect Slimline	38	178		150	C		23.71	60		16.33	
	Horizontal Indirect	38	184		150	C		20.58	63		18.15	
	Solar Twin	40	182		150	C		16.05	53		16.33	17.49
180	Direct	38	218	L	180	C	38		58	2796		
	Indirect	42	218		180	B		29.20	58		15.9	
	Direct Slimline	38	218	L	180	C	37		64	1542		
	Indirect Slimline	42	211		180	C		29.02	64		15.9	
	Horizontal Indirect	42	218		180	C		22.43	71		17.31	
	Solar Twin	45	216		180	B		19.5	58		15.9	18.85


L		Kg	Kg		L		nWh%	Mins	W	kWh/ ANNUM	kW	kW
Cap.	Cylinder Range	Weight Empty	Weight Full	Load Profile	Water Vol	ERP Rating	Energy Efficiency	Reheat Time Indirect	Stand. Loss	Ann. Energy Usage	Prim. Coil Rating	Solar Coil Rating

210	Direct	41	251	L	210	C	38		62	2820		
	Indirect	45	248		210	C		32.5	62		18.15	
	Direct Slimline	41	251	L	210	C	37		68	2833		
	Indirect Slimline	45	242		210	C		32.05	68		18.15	
	Horizontal Indirect	45	250		210	C		27.24	80		17.58	
	Solar Twin	48	250		210	C		23.7	62		18.15	17.18


250	Direct	46	296	XL	250	C	38		73	4485		
	Indirect	51	296		250	C		38.83	73		17.8	
	Horizontal Indirect	51	296		250	C		31.64	89		18.07	
	Solar Twin	53	294		250	C		26.33	73		17.8	19

300	Direct	55	355	XL	300	C	38		85	4531		
	Indirect	60	355		300	C		43.8	85		19.35	
	Horizontal Indirect	60	355		300	C		36.05	98		18.56	
	Solar Twin	63	353		300	C		29.3	85		19.35	20.87

Direct Technical Specification

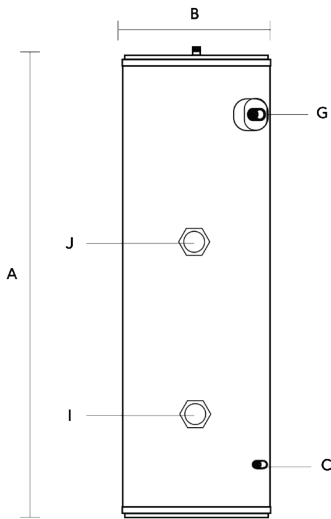


Indirect Technical Specification

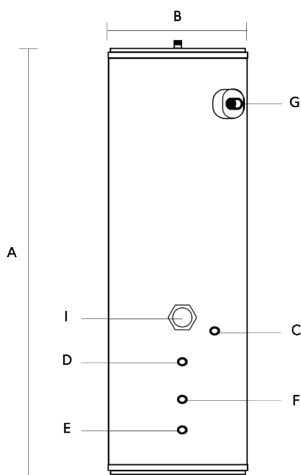


Ltr	A	B	C	G	I	J
Cap	Height	Diameter	Cold Water Inlet (22mm Comp)	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)	Immersion Heater Top (1 3/4" BSP)
90	525	545	195	515	242	
120	900	545	195	703	242	519
150	1100	545	195	890	242	619
180	1280	545	195	1078	242	719
210	1470	545	195	1266	242	819
250	1720	545	195	1516	242	959
300	1980	545	195	1829	242	1109

Ltr	A	B	C	D	E	F	G	I	K
Cap	Height	Diameter	Cold Water Inlet (22mm Comp)	Primary Coil Flow (22mm Comp)	Primary Coil Return (22mm Comp)	Aquastat Pocket Bottom	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)	Secondary Return (22mm Comp)
90	890	545					525	345	
120	900	545	480	440	200	387	710	686	
150	1100	545	560	520	200	387	890	670	
180	1280	545	600	560	200	392	1085	710	
210	1470	545	640	600	200	467	1265	750	1160
250	1720	545	640	600	200	467	1520	750	1410
300	1980	545	640	600	200	467	1785	750	1605

Slimline Direct Technical Specification

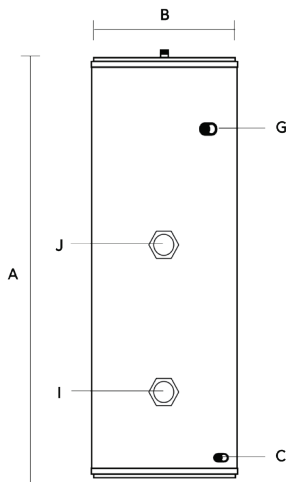

Slimline Indirect Technical Specification

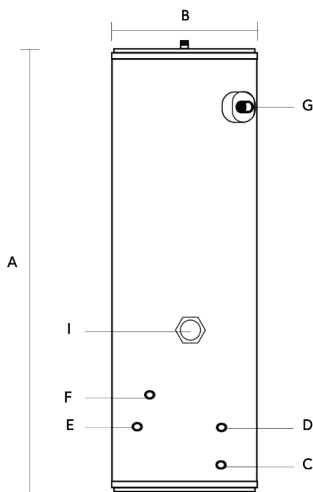


Ltr	A	B	C	G	I	J
Cap	Height	Diameter	Cold Water Inlet (22mm Comp)	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)	Immersion Heater Top (1 3/4" BSP)

60	640	475	162	437	212	
90	1078	475	162	722	212	
120	1205	475	162	987	212	722
150	1470	475	162	1262	212	905
180	1750	475	162	1527	212	1082
210	1920	475	162	1739	212	1245


Ltr	A	B	C	D	E	F	G	I
Cap	Height	Diameter	Cold Water Inlet (22mm Comp)	Primary Coil Flow (22mm Comp)	Primary Coil Return (22mm Comp)	Aquastat Pocket Bottom	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)

60	640	475	162	288	288	343	437	328
90	1266	475	162	288	288	343	722	328
120	1205	475	162	288	288	393	987	368
150	1470	475	162	328	328	433	1262	418
180	1750	475	162	328	328	433	1527	418
210	1920	475	162	363	363	513	1739	453

Twin Solar Technical Specification

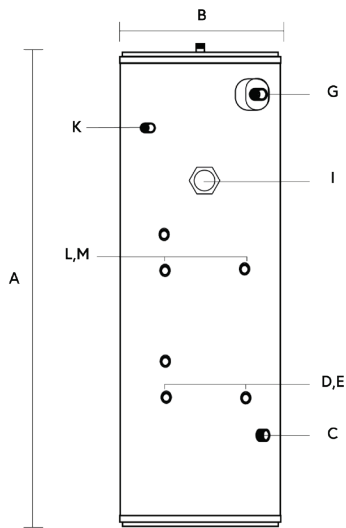

Horizontal Indirect Technical Specification

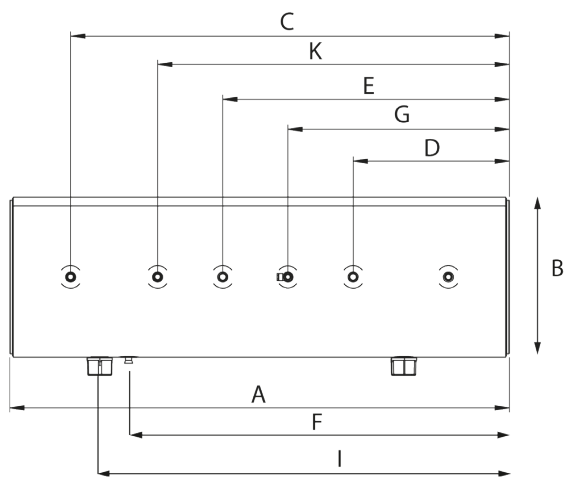


Ltr	A	B	C	D	E	F	G	I	K	L	M	N
Cap	Height	Diameter	Cold Water Inlet (22mm Comp)	Primary Coil Flow (22mm Comp)	Primary Coil Return (22mm Comp)	Aquastat Pocket Bottom	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)	Secondry Return	Upper Coil Flow (22mm Comp)	Upper Coil Return (22mm Comp)	Solar Sensor

150	1140	545	195	310	310	705	900	390		660	660	900
180	1320	545	195	310	310	725	1070	460		665	665	1070
210	1510	545	195	370	370	835	1265	525	1155	780	780	1265
250	1760	545	195	370	370	905	1510	680	1400	855	855	1510
300	1980	545	195	370	370	1035	1785	785	1615	990	990	1785

Ltr	A	B	C	D	E	F	G	I	K
Cap	Length	Diameter	Cold Water Inlet (22mm Comp)	Primary Coil Flow (22mm Comp)	Primary Coil Return (22mm Comp)	Aquastat Pocket Bottom	T&P Relief Valve (1/2" BSP)	Immersion Heater Bottom (1 3/4" BSP)	Secondry Return

120	912	550	702	382	630	670	512	292	-
150	1097	550	889	417	714	859	564	299	-
180	1285	550	1077	417	867	927	642	301	-
210	1475	550	1625	540	990	1065	738	335	1075
250	1725	550	1515	540	990	1315	765	364	1215
300	1941	550	1738	753	1203	1488	978	428	1488

Plumbing G3 Unvented Kit

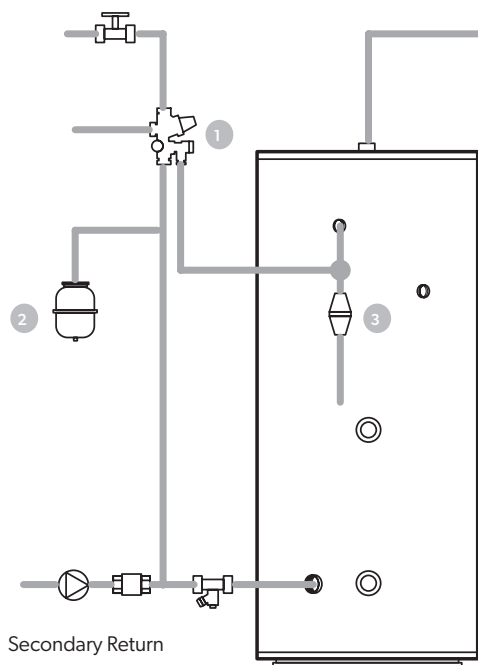

All unvented cylinders must have full G3 kit as supplied with cylinder installed correctly

Inlet Control Group Valve **1** must be fitted on incoming cold feed within 3m of cylinder

Potable Expansion Vessel **2** must be fitted on cold feed between Inlet Valve **1** and cylinder

Tundish **3** must be fitted on T&P and P relief as shown in this diagram and also reference to **page 38-40** Discharge Arrangement

1



2



3




Failure to install unvented kit correctly will invalidate warranty and does not comply with Building Regulations.

Testing



Do not connect a 6,9 or 12kW Immersion without using a relay switch or contactor if 3 phase.

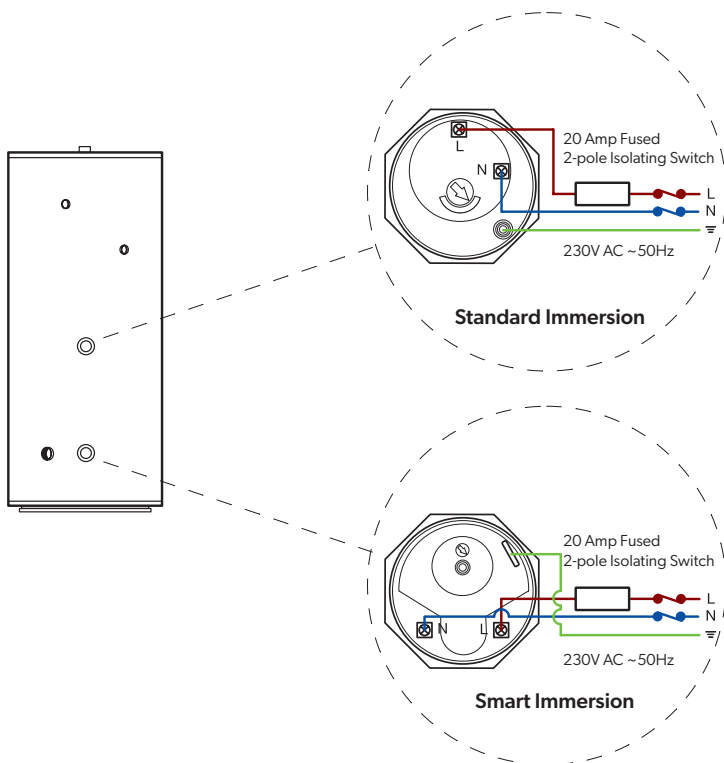

Fitting The Immersion Heater

Always check the immersion for signs of leakage before wiring commences.

The immersion heater must be completely submerged in water with a minimum of 200mm of water above the top of the immersion.




Do not operate the immersion heaters until the cylinder has been filled with water

Wire the immersion through a double pole fused spur. The contact separation must be no less than 3mm with a minimum breaking capacity of 16A or 20A.

Smart Immersion Functions

On the new Smart Immersion we have four setting options:

- **OFF**
- **ECO** – smart control: starts for 2 weeks at 70°C and then it will select automatically storage temperatures through the day
- **MANUAL** – works as standard mechanical thermostat can be set up to 70°C
- **OPK** (off peak) – this must be selected when the cylinder is connected to the night tariff. During the day time the immersion is not connected and this would require the smart control to be reset. When OPK is selected it should be set at 60°C and working as a standard thermostat. Alternatively the user can select the manual mode.

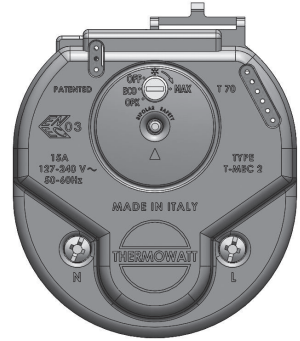

Immersion Testing

Install the immersion using rigid cable, 2m long max, with 2.5 mm² cross-section and a temperature resistance of at least 85°C.

The Cable should be rubber insulated HOFR sheathed, complying with BS6141 Table 8. It must be fully earthed.

Ensure all terminal connections are securely made. Do not however use excessive force when tightening the terminal screws.

Ensure that the power supply is disconnected prior to making any electrical connections. Provide 90mm length of cable for each of the Live and Neutral cables with 8mm of bare cable for connection to the Immersion terminals.

Provide 110mm length of cable for the Earth cable with 20mm of bare cable for connection to the Earth stud.

Make a circle with the bare Earth cable and tighten securely using the washer to the Earth stud.

Fit the Live and Neutral cables to the Immersion thermostat.

Ensure all terminal connections are properly tightened prior to commissioning

For installations with high water demands, or areas with hard water, Titanium immersions should be fitted.

The thermostat should be set so that the water is heated to a temperature between 60°C and 65°C. Water stored at temperatures below 60°C can result in bacteria growth and temperatures above 65°C can cause scalding.

The immersion stat has an integrated high limit stat which If the primary thermostat fails the limit thermostat takes over and shuts the element off before the water can boil in the cylinder.

Testing

If there is no hot water you can carry out several tests with your multimeter to decide which component is faulty.

First remove the cover for the wiring and then check for voltage across the live and neutral terminals on the element. If you get a reading the element is faulty (power going through thermostat so stat is working).

Next, check whether the thermostat is working by connecting your multimeter to the live out of the thermostat, if there is no reading the thermostat is faulty.



If the water is getting extremely hot the thermostat is stuck in the 'ON' position and will need to be replaced.

Safety

- Disconnect the immersion from the mains electrical supply before removing any covers.
- Do not attempt to replace the immersion heater(s) with alternatives to those recommended by JOULE.
- Do not bypass the Thermal Cut-Out(s) in any circumstances.

Replacing The Immersion

First task is to isolate the power. Immersion heaters are rated at 3kW and require their own 16A or 20A double pole isolation switch. Turn off the power from the isolation switch and remove the fuse. Next turn off the water to the tank.


Drain the water from the tank via the drain cock using a hose. Remove the immersion using an immersion spanner. Thread in the replacement immersion heater creating the seal using a rubber o-ring. Slot the immersion heater into the hole with the washer and make sure the threads are lined up correctly. Tighten with whichever spanner you are using, taking care not to over tighten and risk damaging the cylinder.

Open the taps up and turn the cold water supply back on. When water starts to come out of the taps shut them off and check for leaks. If all is good wire up the immersion heater, checking that your connections are good. Fit the cap on the immersion and turn the power back on.

If the immersion is connected to a booster switch turn it on and check that it heats up. Economy 7 immersion heaters will only turn on at set times during the night and cannot be altered so check the following morning to see if the water has heated up properly.

Un-Plumbed Cylinder Schematic


Mechanical Diagram S-Plan

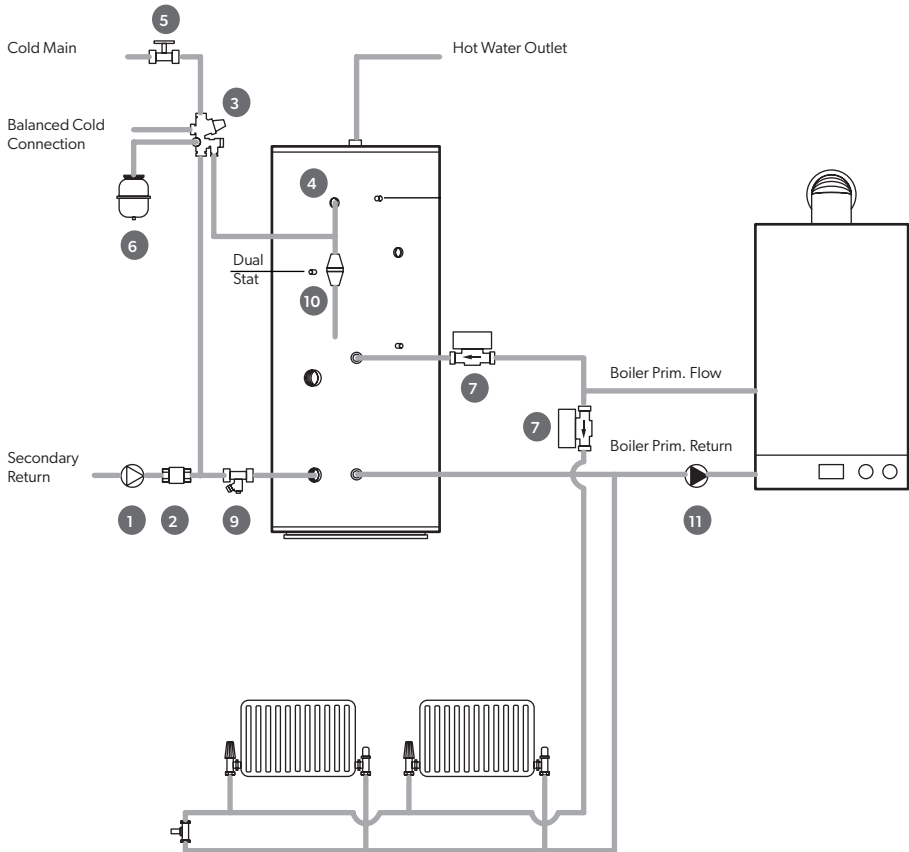

- 1 Bronze Pump
- 2 Non Return Valve (not supplied)
- 3 Inlet Control Group
- 4 Temperature & Pressure Relief Valve
- 5 Isolation Valve (not supplied)
- 6 Exp. Vessel with Wall Bracket
- 7 2-port Zone Valve (one only supplied)
- 9 Drain Valve (not supplied)
- 10 Tundish
- 11 Heating Circ. Pump (required where boiler has no internal pump)


Un-Plumbed Cylinder Schematic

Electrical Diagram S-Plan

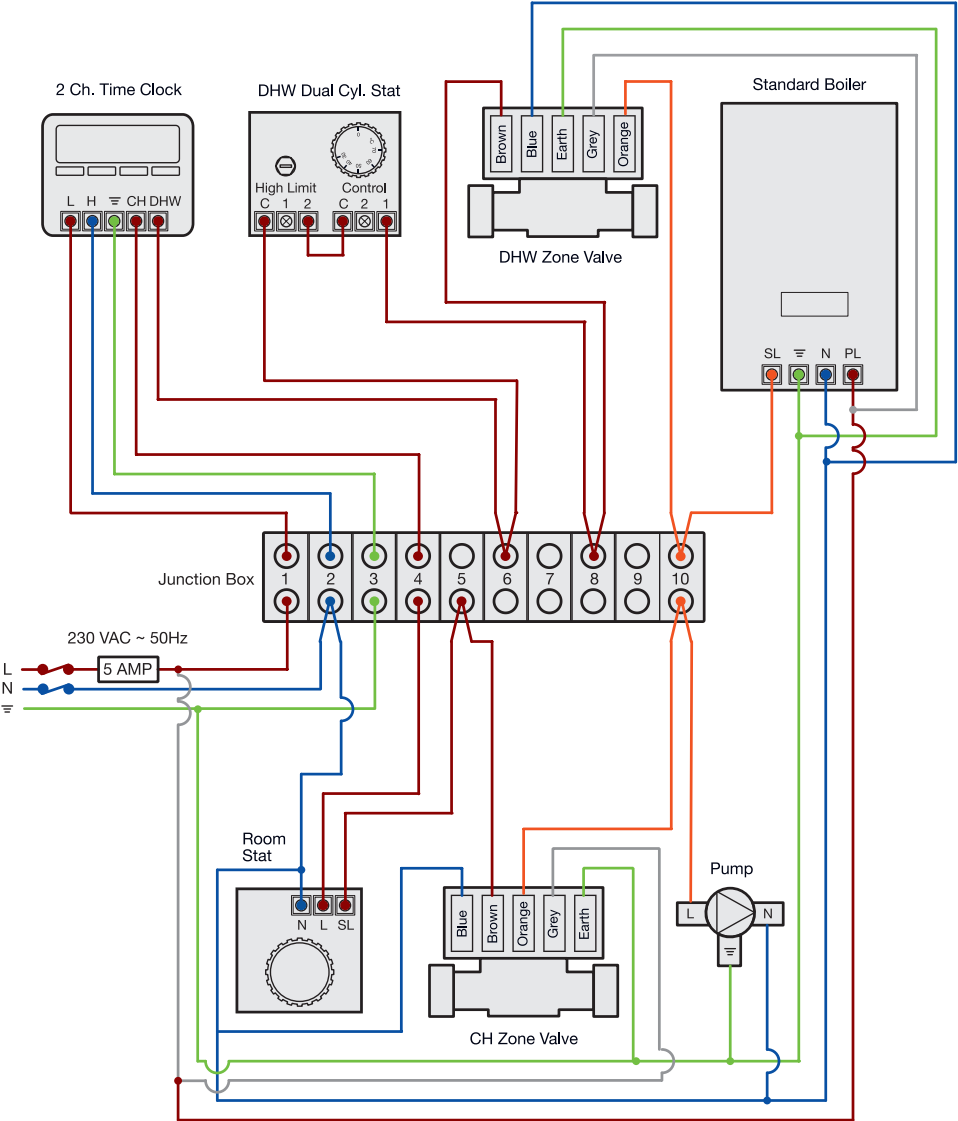

Un-Plumbed Cylinder Schematic


Mechanical Diagram Y-Plan

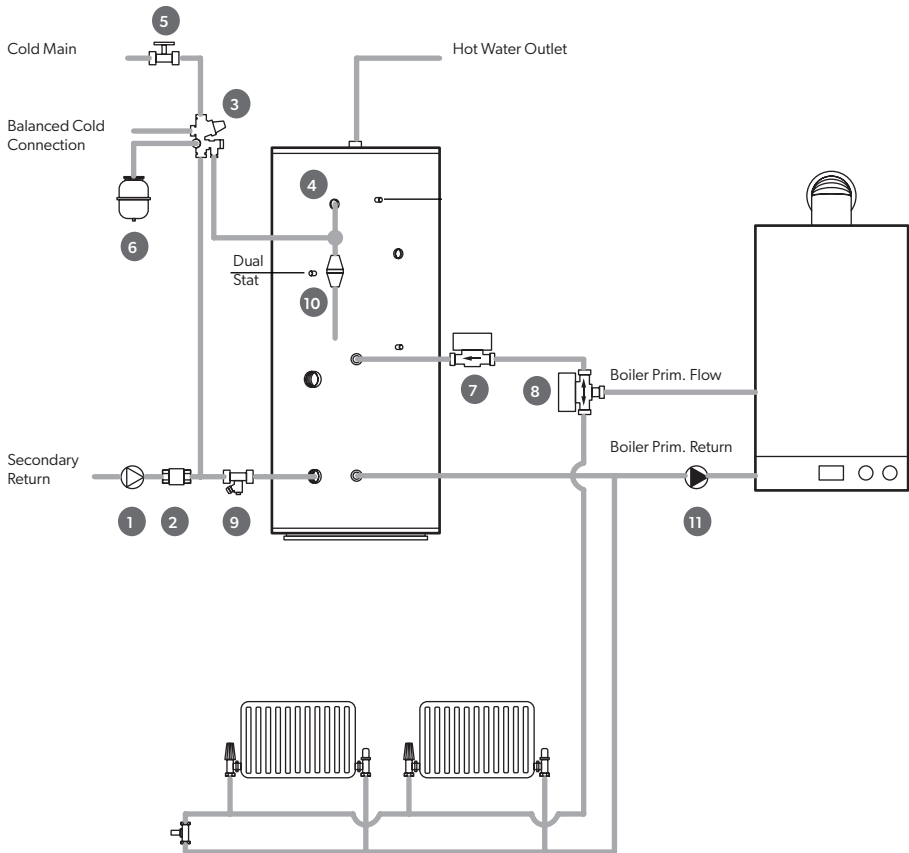

- 1 Bronze Pump
- 2 Non Return Valve (not supplied)
- 3 Inlet Control Group
- 4 Temperature & Pressure Relief Valve
- 5 Isolation Valve (not supplied)
- 6 Exp. Vessel with Wall Bracket
- 7 2-port Zone Valve
- 8 3-port Valve (not supplied)
- 9 Drain Valve (not supplied)
- 10 Tundish
- 11 Heating Circ. Pump (required where boiler has no internal pump)

Un-Plumbed Cylinder Schematic

Electrical Diagram Y-Plan

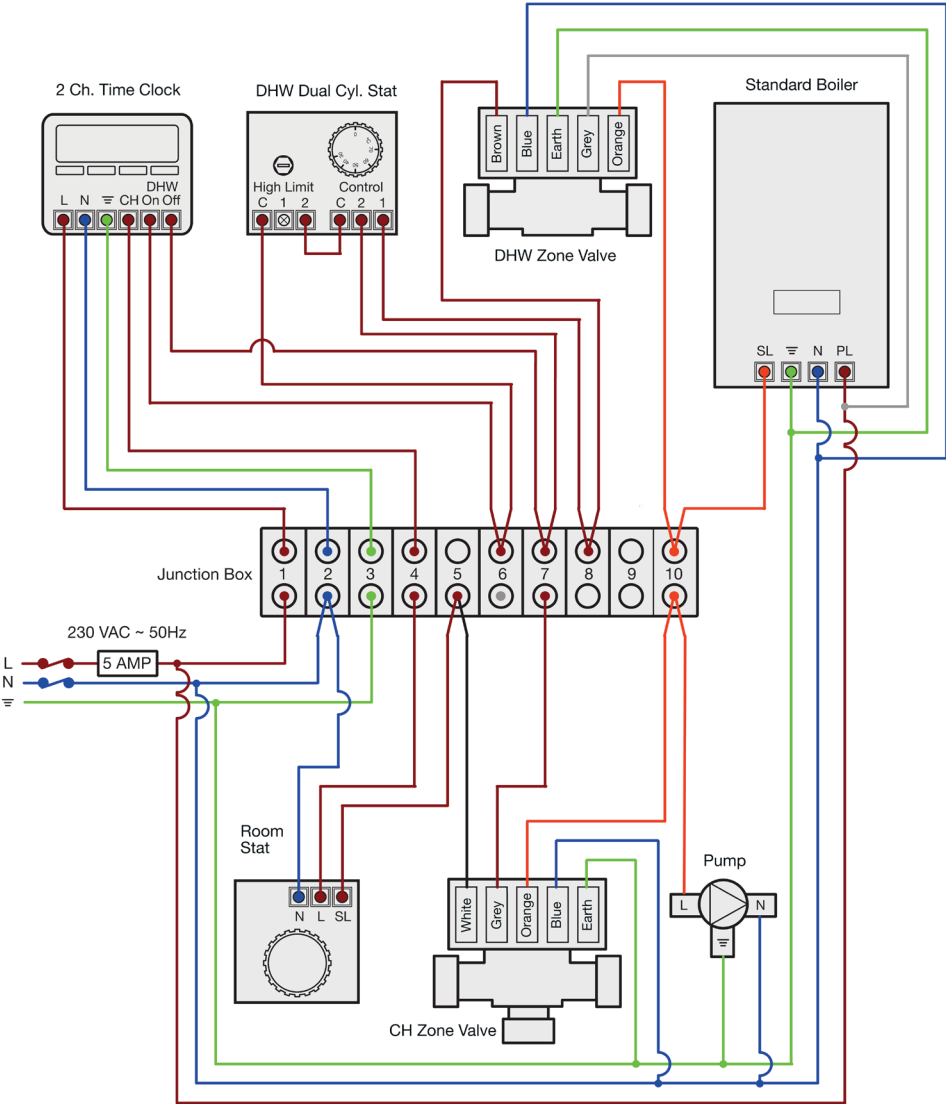


Electronic Controls

Electrical Controls

Suitable time and temperature controls should be installed to allow the cylinder to operate at its maximum efficiency. All electrical work carried out must comply with IEE Wiring Regulations (BS 3456). Products must also be installed as per the regulations in G3 of the Building Regulations. A boiler interlock should be in place and is a wiring arrangement where the boiler cannot fire unless there is a demand for hot water generation.

Typical Wiring Diagrams

These diagrams relate only to the components listed. Others may vary in their wiring requirements, particularly thermostats. Always refer to manufacturers' instructions which may override the detail in order to function correctly.

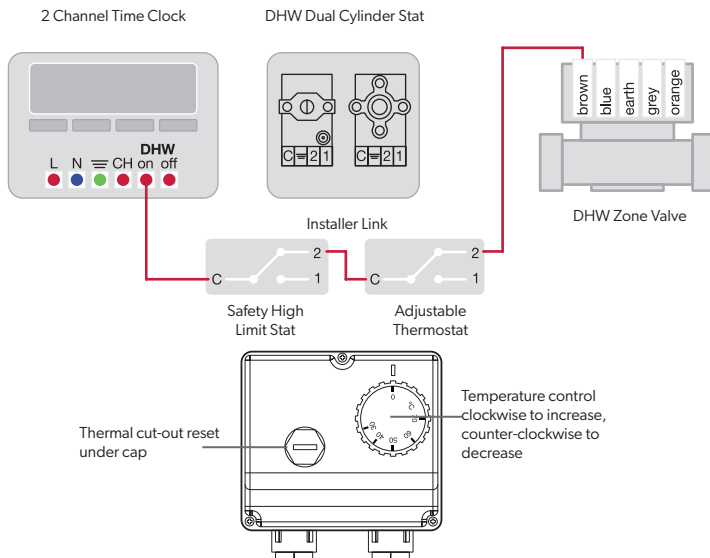

The link must be installed between the adjustable thermostat and the safety cut-out thermostat as shown above. The operating thermostat which controls the temperature of the domestic hot water is adjustable. A safety cut out is also incorporated within the thermostat and will operate at $85^{\circ}\text{C} \pm 3^{\circ}\text{C}$. Both thermostats should run in series. To reset the safety cut-out and the motorised valve the reset button must be pressed in.

JOULE cannot be responsible if alternative wiring plans are used.



Before resetting the safety cut-out or altering the thermostat setting, isolate electrical supply to the unit before removal of the cover.

Discharge Arrangement

Discharge Pipework

The inlet control group should be positioned so that the discharge from both safety valves can be combined via a 15mm end feed tee. Connect the tundish and route the discharge pipe which must be routed in accordance with Building Regulations - Part G3 of schedule 1.

When operating normally water will not be discharged. Water discharge from the two safety valves will only occur under fault conditions. The tundish should be vertical, located in the same space as the unvented hot water storage system and be fitted as close as possible, and lower than the valve, with no more than 600mm between the safety device outlet e.g. the temperature relief valve and the tundish.

The position of the tundish must be that when installed it is visible to the occupants of the premises. When positioning the tundish, the drain valves and motorised valve ensure that these items are positioned away from any electrical devices. The discharge pipe (D2) coming from the tundish should terminate in a safe place where there is no risk to persons in the vicinity of the discharge, be of metal and:

- Be at least one pipe size larger than the nominal outlet size of the safety device unless its total equivalent hydraulic resistance exceeds that of a straight pipe 9m long, i.e. discharge pipes between 9m and 18m equivalent resistance length should be at least two sizes larger than the nominal outlet size of the safety device, between 18 and 27m at least 3 sizes larger, and so on.
- Bends must be taken into account in calculating the flow resistance. Refer to diagram 1, Table 1 and the worked example. An alternative approach for sizing discharge pipes would be to follow BS6700 Specification for design, installation, testing and maintenance of services supplying water for domestic use within buildings and their curtilages.
- Have a vertical section of pipe at least 300mm long, below the tundish before any elbows or bends in the pipework.
- Be installed with a continuous fall.

It is preferable for the discharge to be visible at both the tundish and the final point of discharge. Where this is not possible or practically difficult, there should be clear visibility at one or other of these locations.

Discharge Arrangement

Examples Of Acceptable Dischargetment Arrangements

Ideally below the fixed grating and above the water seal in a trapped gulley.

Downward discharges at a low level; i.e. up to 100mm above external surfaces such as car parks, hard standings, grassed areas etc. are acceptable providing that where children play or otherwise come into contact with discharges, a wire cage or similar guard is positioned to prevent contact whilst maintaining visibility.

Discharges at a high level; e.g. in to metal hopper and metal down pipe with the end of the discharge pipe clearly visible (tundish visible or not) or onto a roof capable of withstanding high temperature discharges of water and 3m from any plastic guttering systems that would collect such discharges (tundish available).

Where a single pipe serves a number of discharges, such as in blocks of flats, the number served should be limited to not more than 6 systems so that any installation can be traced reasonably easily.

The single common discharge pipe should be at least one pipe size larger than the largest individual discharge pipe to be connected. If unvented hot water storage systems are installed where discharges from safety devices may not be apparent, i.e. in dwellings occupied by blind, infirm or disabled people, consideration should be given to the installation of an electronically operated device to warn when discharge takes place.

Worked Example


The example on the next page is for G1/2 temperature relief valve with a discharge pipe (D2) having 4 No. elbows and length of 7m from the tundish to the point of discharge.

Maximum resistance allowed for a straight length of 22mm copper discharge pipe (D2) from a G1/2 temperature relief valve is: 9.0m. Subtract the resistance for 4 No. 22mm elbows at 0.8m each = 3.2m. Therefore the maximum permitted length equates to: 5.8m. 5.8m is less than the actual length of 7m, therefore calculate the next largest size.

Maximum resistance allowed for a straight length of 28mm pipe (D2) from a G1/2 temperature relief valve equates to: 14m. As the actual length is 7m, a 28mm (D2) copper pipe will be satisfactory.

	G 1/2				G 3/4			G1		
Min. size of discharge pipe D1	15mm				22mm			28mm		
Min. size of discharge pipework D2 from tundish	22mm	28mm	35mm	28mm	35mm	42mm	35mm	42mm	54mm	
Max. length of straight pipe (no bends or elbows)	Up to 9m	Up to 18m	Up to 27m	Up to 9m	Up to 18m	Up to 27m	Up to 9m	Up to 18m	Up to 27m	
Deduct the figure below from the maximum length for each bend or elbow in the discharge pipe	0.8m	1.0m	1.4m	1.0m	1.4m	1.7m	1.4m	1.7m	2.3m	

Sizing of copper discharge pipe (D2) for a temp. relief valve with a G1/2 outlet size (as supplied)

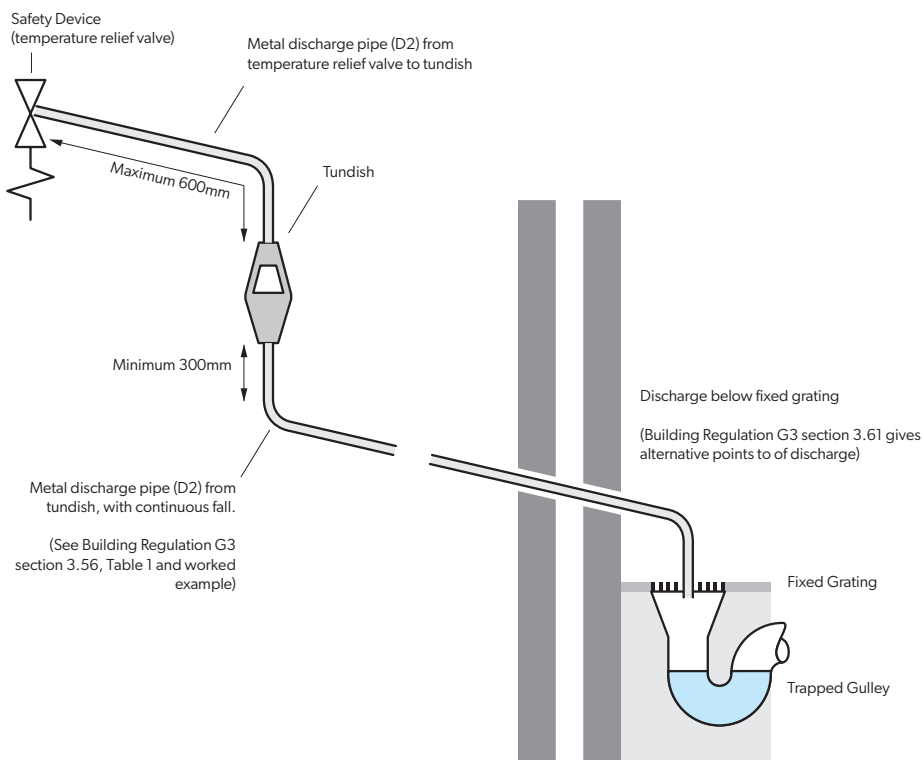

The discharge will consist of scalding water and steam. Asphalt, roofing felt and non-metallic rainwater goods may be damaged by such discharges. It is not acceptable to discharge straight into a soil pipe.

Commissioning

Filling

First you must ensure that the pressure in the expansion vessel is the same as the setting of the pressure reducing valve i.e. 3 bar (45PSI). The valve is of the Schrader car tyre type. Check all the connections for water tightness including any factory made connections such as the immersion heater and the temperature and pressure relief valve. Prior to filling, open the hot tap furthest away from the cylinder to expel air. Open the cold main isolation valve and allow the unit to fill.

Once the cylinder has been fully commissioned it should be heated to its normal operating temperature. Draw off secondary hot water to each outlet and allow hot water to flow from each outlet for at least 30 seconds to remove any flux residue from the pipe work within the secondary hot water system. Then fully drain the cylinder and re-fill to ensure that all flux residues are removed from the system.

Indirect Units

Fill the primary circuit according to the boiler manufacturers' commissioning instructions. Any additives used in the heating system water circulating through the cylinder coil must be compatible for use with stainless steel cylinders.

Ensure the lever on the two port valve is set to the filling position. When full, move the lever back. Switch the programmer to Domestic Hot Water (DHW) and allow the unit to start to heat. Adjust the dial of the dual thermostat to between 30°C and 70°C as required.

Storage Temperature

60-65°C is the recommended storage temperature for both direct and indirect cylinders. In hard water areas consideration should be given to reducing this to 50-55°C. In many healthcare applications the guidance on Legionella control and safe water delivery temperatures will require storing the water at 60-65°C, distributing at 50- 55°C and using thermostatic mixing valves to control the final temperature. For details consult the NHS Estates Guidance on safe hot water temperatures.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical equipment.

The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the company where this product was purchased.

Maintenance

General

Servicing should only be carried out by competent installers and any spare parts used must be purchased from JOULE.



Never bypass any safety devices or operate the unit without them being fully operational

Draining

Switch the electrical power off (important to avoid damage to element). Isolate boiler from the unit. Turn off the cold water supply valve. Open hot water tap. Open the drain valve. The unit will drain.



Water drained off may be very hot!

Annual Maintenance

The water heaters require annual servicing in order to ensure safe working and optimum performance. It is essential that the following checks are performed by a competent installer on an annual basis. This is commonly done at the same time as the annual boiler service.

- Twist the cap of the expansion relief valve on the inlet control set and allow water to flow for 5 seconds. Release and make sure it resets correctly.
- Repeat with the pressure / temperature relief valve. In both cases check that the discharge pipework is carrying the water away adequately. If not, check for blockages etc. and clear.
- Check that any immersion heaters fitted are working correctly and that they are controlling the water at a temperature between 55°C and 65°C.
- Check the pressure in the expansion vessel is charged to 3 bar. Turn off the water supply to the unit and open a hot tap first. The air valve on expansion vessel is a Schrader (car tyre) type.
- Air, CO₂ or Nitrogen may be used to charge the expansion vessel. Unscrew the head on the inlet control set and clean the mesh filter within.

The Service Log Book supplied with this unit should be updated at each service.



Your guarantee may be void if you cannot produce proof of annual servicing immersion heater replacement.

Immersion Heater Replacement

If the thermal cut out on the Immersion heater operates contact a competent installer. If the thermal cut out fault occurs again the immersion will need to be replaced.

Prior to installing the replacement Immersion, ensure the o-ring is correctly positioned on the head of the Immersion and lubricate the threads before fitting.

Thread the Immersion by hand until it is hand tight and then tighten gently to allow the o-ring to create a water tight seal.

Inspection

Where internal inspection of the cylinder is required an endoscope can be used. Inspection can be carried out by draining down the cylinder and removing a component that is fitted to a wet connection in the cylinder.

Safety Valve Checks

Water discharges from either the temperature/pressure relief valve or the expansion relief valve indicates a problem.

- Check your discharge pipework is free from debris and is carrying water away to waste effectively.
- Next hold both of these safety valves open, allowing as much water as possible to flow through the tundish.
- Release the valves and check that they reseal correctly.



Completion of the Benchmark Checklist on pages 46-47 must be adhered to by the installer

Taking The Cylinder Out Of Use

Shutting Down

- Ensure the cold water supply is isolated and at least two hot water draw off points are open prior to draining the cylinder.
- One of the hot water draw off points should be as close as possible to the height of cylinder in draw off terms.
- Where applicable use the drain valve at the cold water inlet to drain the contents of the cylinder.
- Isolate the coil from the main heating system. If necessary blow out the coil prior to moving the cylinder.

Recycling And Disposal

The cylinder or any of its components must not be disposed of in domestic rubbish. The material in the cylinder, packaging and components contain recyclable materials and they should be disposed of properly and in accordance with national regulations.

Guidance In The Event Of A Problem

If you have a problem in the first year within the warranty period, contact the plumber who fitted the unit. Thereafter contact the plumber who carries out the annual servicing for you. If your cylinder develops a leak we will supply you with a new one. We ask for a nominal upfront payment to prevent fraud and we will require the original unit to be returned to us for inspection along with a copy of your Service Log Book. If it is confirmed that it has failed within the terms of the guarantee your upfront payment will be refunded.

Log Book

The installer must comply with all of the installation instructions contained within this installation manual. On completion of the initial installation and after each subsequent annual service the Benchmark Log Book must be completed and signed by the competent person who has worked the unit.

The purpose of Benchmark is to ensure that customers have the correct equipment for their requirements installed in accordance with the manufacturer's installation instructions. The equipment must be installed by installers who have completed an accredited competent person's scheme and who install, commission and service the equipment in accordance with the manufacturer's instructions.

All installations must comply with the appropriate Building Regulations and the Benchmark Log Book should be provided to the customer. The Benchmark Log Book can also be used to show that all equipment is installed in accordance with the relevant Building Regulations.

Troubleshooting

Your stainless system is automatic in normal use and requires only annual servicing. You should employ a competent installer to perform the annual servicing. Normally this is timed to coincide with the annual boiler service.



If water is flowing from the safety valves through the tundish this indicates a fault condition and action is needed.

If this water is hot, turn the boiler and / or the immersion heater off. Do not turn off the water until the discharge runs cool. The discharge may also stop.

CALL OUT A COMPETENT PLUMBER TO SERVICE THE UNIT.

Tell them you have a fault on an unvented cylinder. We stock all the spare parts they may need and JOULE can be contacted via telephone numbers on back page.

Fault	Possible Cause	Solution
Water escaping from the case unit.	Compression fitting on hot - draw off not sealing.	Check all factory and plumber connections inc T and P and Immersion heater.
Cold water at hot tops.	Immersion heater not switched on or cutout has triggered.	Check / reset.
	Indirect - Boiler not working.	Check boiler - consult boiler manufactures' instructions.
	Indirect - motorized valve fault.	Check plumbing / wiring motorized valve.
	Indirect - cutout in dual stat has operated.	Check for faults in the thermostat or high limit stat and reset.
Water discharges from expansion relief valve	If continual - pressure reducing valve (part of inlet control set) may not be operating correctly.	Check outlet pressure from inlet control set is 3 bar.
	If continual - expansion relief valve seat may be damaged.	Remove cartridge - check seat and renew if necessary.
	If intermittent - expansion vessel charge may have reduced / bladder perished.	Check pressure in expansion vessel. Recharge to 3 bar if necessary. If bladder perished replace vessel.
	Unit is being back pressurized.	With cylinder cold check pressure in cylinder. If this is the same as the incoming mains pressure then you are getting backfeed. Install a balanced cold supply.
Water discharges from temperature & pressure relief valve	Unit has overheated - thermal controls have failed.	Switch off power to boiler and immersion heaters. Leave water supply on. Wait until discharge stops. Isolate water supply and replace if faulty.
Milky / cloudy water	Oxygenated Water.	Water from any pressurized system will release oxygen bubbles when flowing. The bubbles will settle out.
No hot water flow	Cold main off.	Check and open stopcock.
	Strainer blocked in pressure reducing valve.	Isolate water supply and clean.
	Inlet control set may be fitted incorrectly.	Check and refit if required.
Noise during hot water draw off - typically worse in the morning	Loose airing cupboard pipework.	Install extra clips.
Hot or warm water from cold tap	If tap runs cold after a minute or so the pipe is picking up heat from heating pipework.	Insulate/re-route.

Stelflow - Declaration Of Conformity

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: 1003092019

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: **STELFLOW Direct Standard and Direct Slim Range**

Product Reference: **Direct Standard Models**

TRSMVD-0090LFC	90L STEL DIR STD
TRSMVD-0120LFB	120L STEL DIR STD
TRSMVD-0150LFB	150L STEL DIR STD
TRSMVD-0180LFB	180L STEL DIR STD

TRSMVD-0210LFC	210L STEL DIR STD
TRSMVD-0250LFC	250L STEL DIR STD
TRSMVD-0300LFC	300L STEL DIR STD

Direct Slim Models

TRSMVD-0060SFC	60L STEL DIR SLM
TRSMVD-0090SFC	90L STEL DIR SLM
TRSMVD-0120SFC	120L STEL DIR SLM

TRSMVD-0150SFC	150L STEL DIR SLM
TRSMVD-0180SFC	180L STEL DIR SLM
TRSMVD-0210SFC	210L STEL DIR SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 50440:2015, Specification for Efficiency of domestic electrical storage water heaters and testing methods.

and that the product also complies with the provisions of the following European Directives:

Ecodesign Regulation (EU) No 814/2013 and Energy Labelling Regulation (EU) No 812/2013.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 10th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1006092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: STELFLOW Indirect Standard and Indirect Slim Range

Product Reference: Indirect Standard Models

TRSMVI-0090LFC	90L STEL IND STD
TRSMVI-0120LFB	120L STEL IND STD
TRSMVI-0150LFB	150L STEL IND STD

TRSMVI-0180LFB	180L STEL IND STD
TRSMVI-0210LFC	210L STEL IND STD
TRSMVI-0250LFC	250L STEL IND STD
TRSMVI-0300LFC	300L STEL IND STD

Indirect Slim Models

TRSMVI-0060SFC	60L STEL IND SLM
TRSMVI-0090SFC	90L STEL IND SLM
TRSMVI-0120SFC	120L STEL IND SLM
TRSMVI-0150SFC	150L STEL IND SLM

TRSMVI-0180SFC	180L STEL IND SLM
TRSMVI-0210SFC	210L STEL IND SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters.

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 7th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1012092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: STELFLOW Twin Indirect Standard and Twin Indirect Slim Range

Product Reference: *Twin Indirect Standard Models*

TRSMVS-0120LFB	120L STEL TWN STD
TRSMVS-0150LFB	150L STEL TWN STD
TRSMVS-0180LFB	180L STEL TWN STD

TRSMVS-0210LFC	210L STEL TWN STD
TRSMVS-0250LFC	250L STEL TWN STD
TRSMVS-0300LFC	300L STEL TWN STD

Twin Indirect Slim Models

TRSMVS-0150SFC	150L STEL TWN SLM
TRSMVS-0180SFC	180L STEL TWN SLM
TRSMVS-0210SFC	210L STEL TWN SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters..

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 5th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: 1009092019

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: STELFLOW Horizontal Indirect Range

Product Reference: Indirect Horizontal Standard Models

TRSMHI-0120LFB	120L STEL IND HOR STD	TRSMHI-0210LFC	210L STEL IND HOR STD
TRSMHI-0150LFB	150L STEL IND HOR STD	TRSMHI-0250LFC	250L STEL IND HOR STD
TRSMHI-0180LFB	180L STEL IND HOR STD	TRSMHI-0300LFC	300L STEL IND HOR STD

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters.

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 6th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Cyclone - Declaration Of Conformity

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products
Unique identification number of this DoC: **1004092019**

We, the manufacturer:
Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: CYCLONE PLUS Direct Standard and Direct Slim Range

Product Reference: Direct Standard Models

TRJMVDP-0090LFC	90L CYC + DIR STD
TRJMVDP-0120LFB	120L CYC + DIR STD
TRJMVDP-0150LFB	150L CYC + DIR STD
TRJMVDP-0180LFB	180L CYC + DIR STD

TRJMVDP-0210LFC	210L CYC + DIR STD
TRJMVDP-0250LFC	250L CYC + DIR STD

Direct Slim Models

TRJMVDP-0060SFC	60L CYC + DIR SLM
TRJMVDP-0090SFC	90L CYC + DIR SLM
TRJMVDP-0120SFB	120L CYC + DIR SLM
TRJMVDP-0150LFB	150L CYC + DIR SLM

TRJMVDP-0150SFC	150L CYC + DIR SLM
TRJMVDP-0180SFC	180L CYC + DIR SLM
TRJMVDP-0210SFC	210L CYC + DIR SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 50440:2015, Specification for Efficiency of domestic electrical storage water heaters and testing methods.

and that the product also complies with the provisions of the following European Directives:

Ecodesign Regulation (EU) No 814/2013 and Energy Labelling Regulation (EU) No 812/2013.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:
Wakefield, United Kingdom. 9th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1007092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: CYCLONE PLUS Indirect Standard and Indirect Slim Range

Product Reference: Indirect Standard Models

TRJPMVI-0090LFC	90L CYC + IND STD
TRJPMVI-0120LFB	120L CYC + IND STD
TRJPMVI-0150LFB	150L CYC + IND STD

TRJPMVI-0180LFB	180L CYC + IND STD
TRJPMVI-0210LFC	210L CYC + IND STD
TRJPMVI-0250LFC	250L CYC + IND STD
TRJPMVI-0300LFC	300L CYC + IND STD

Indirect Slim Models

TRJPMVI-0060SFC	60L CYC + IND SLM
TRJPMVI-0090SFC	90L CYC + IND SLM
TRJPMVI-0120SFC	120L CYC + IND SLM
TRJPMVI-0150SFC	150L CYC + IND SLM

TRJPMVI-0180SFC	180L CYC + IND SLM
TRJPMVI-0210SFC	210L CYC + IND SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters..

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 8th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1013092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: CYCLONE PLUS Twin Indirect Standard and Twin Indirect Slim Range

Product Reference: *Twin Indirect Standard Models*

TRJMVS-0150LFB	150L CYC + TWN STD
TRJMVS-0180LFB	180L CYC + TWN STD

TRJMVS-0210LFC	210LCYC + TWN STD
TRJMVS-0250LFC	250L CYC + TWN STD
TRJMVS-0300LFC	300L CYC + TWN STD

Twin Indirect Slim Models

TRJMVS-0150SFB	150L CYC + TWN SLM
TRJMVS-0180SFB	180L CYC + TWN SLM
TRJMVS-0210SFB	210L CYC + TWN SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters..

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 4th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1010092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: CYCLONE PLUS Horizontal Indirect Range

Product Reference: Indirect Horizontal Models

TRJMHI-0120LFB	120L CYC + IND HOR	TRJMHI-0210LFC	210L CYC + IND HOR
TRJMHI-0150LFB	150L CYC + IND HOR	TRJMHI-0250LFC	250L CYC + IND HOR
TRJMHI-0180LFB	180L CYC + IND HOR	TRJMHI-0300LFC	300L CYC + IND HOR

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters.

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 5th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Evocyl - Declaration Of Conformity

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products
Unique identification number of this DoC: **1005092019**

We, the manufacturer:
Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: **EVOCYL Direct Standard and Direct Slim Range**

Product Reference: **Direct Standard Models**

TTEMVD-0090LFB	90L EVO DIR STD
TTEMVD-0120LFB	120L EVO DIR STD
TTEMVD-0150LFB	150L EVO DIR STD
TTEMVD-0180LFB	180L EVO DIR STD

TTEMVD-0210LFC	210L EVO DIR STD
TTEMVD-0250LFC	250L EVO DIR STD
TTEMVD-0300LFC	300L EVO DIR STD

Direct Slim Models

TTEMVD-0060SFB	60L EVO DIR SLM
TTEMVD-0090SFB	90L EVO DIR SLM
TTEMVD-0120SFB	120L EVO DIR SLM
TTEMVD-0150SFB	150L EVO DIR SLM

TTEMVD-0180SFB	180L EVO DIR SLM
TTEMVD-0210SFC	210L EVO DIR SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 50440:2015, Specification for Efficiency of domestic electrical storage water heaters and testing methods.

and that the product also complies with the provisions of the following European Directives:

Ecodesign Regulation (EU) No 814/2013 and Energy Labelling Regulation (EU) No 812/2013.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:
Wakefield, United Kingdom. 9th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: 1008092019

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: EVOCYL Indirect Standard and Indirect Slim Range

Product Reference: Indirect Standard Models

TTEMVI-0090LFB	90L EVO IND STD
TTEMVI-0120LFB	120L EVO IND STD
TTEMVI-0150LFB	150L EVO IND STD

TTEMVI-0180LFB	180L EVO IND STD
TTEMVI-0210LFC	210L EVO IND STD
TTEMVI-0250LFC	250L EVO IND STD
TTEMVI-0300LFC	300L EVO IND STD

Indirect Slim Models

TTEMVI-0060SFB	60L EVO IND SLM
TTEMVI-0090SFB	90L EVO IND SLM
TTEMVI-0120SFB	120L EVO IND SLM
TTEMVI-0150SFB	150L EVO IND SLM

TTEMVI-0180SFB	180L EVO IND SLM
TTEMVI-0210SFC	210L EVO IND SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters.

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 6th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: **1014092019**

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: EVOCYL Twin Indirect Standard and Twin Indirect Slim Range

Product Reference: *Twin Indirect Standard Models*

TTEMVS-0150LFB	150L EVO TWN STD
TTEMVS-0180LFB	180L EVO TWN STD

TTEMVS-0210LFC	210L EVO TWN STD
TTEMVS-0250LFC	250L EVO TWN STD
TTEMVS-0300LFC	300L EVO TWN STD

Twin Indirect Slim Models

TTEMVS-0150SFB	150L EVO TWN SLM
TTEMVS-0180SFB	180L EVO TWN SLM
TTEMVS-0210SFC	210L EVO TWN SLM

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters..

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 3rd of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Declaration of Conformity

Supplier's declaration of conformity (DoC) on the Ecodesign of energy related products

Unique identification number of this DoC: 1011092019

We, the manufacturer:

Joule Hot Water Systems UK Ltd.
4 Valencia Park, Gilcar Way,
Wakefield Europort,
Normanton, UK.
WF10 5QS

declare under our sole responsibility that the product:

Product Identifier: **EVOCYL Horizontal Indirect Range**

Product Reference: **Indirect Horizontal Models**

TTEMHI-0120LFB	120L EVO IND HOR STD
TTEMHI-0150LFB	150L EVO IND HOR STD
TTEMHI-0180LFB	180L EVO IND HOR STD

TTEMHI-0210LFC	210L EVO IND HOR STD
TTEMHI-0250LFC	250L EVO IND HOR STD
TTEMHI-0300LFC	300L EVO IND HOR STD

to which this declaration relates is in conformity with the essential requirements and other relevant requirements of Directive 2009/125/EC on the Ecodesign of energy related products. The product is in conformity with the following standards and/or other normative documents:

European Standard EN 12897:2006 Water supply, Specification for indirectly heated unvented (closed) storage water heaters.

and that the product also complies with the provisions of the following European Directives:

Commission Delegated Regulation (EU) No 813/2013 supplementing Directive 2009/125/EC, Ecodesign requirements for space heaters and combination heaters.

In addition, those models which can be fitted with immersion heating elements, have been designed and built according to EN60335 European Standard concerning safety in electric appliances and similar equipment and comply with 2014/35/EU European Low Voltage Directive.

Place and date of issue:

Wakefield, United Kingdom. 5th of October
2019

Signed by the manufacturer:



Name: Ronan Ginnell

Title: Director

Note: This declaration is only valid where no modifications have been made to the product and to the applicable legislation.

Benchmark Checklist

GAS BOILER SYSTEM COMMISSIONING CHECKLIST

This Commissioning Checklist is to be completed in full by the competent person who commissioned the storage system as a means of demonstrating compliance with the appropriate Building Regulations and then handed to the customer to keep for future reference.

Failure to install and commission this equipment to the manufacturer's instructions may invalidate the warranty but does not affect statutory rights.

Customer Name	_____	Telephone Number	_____
Address	_____		
Cylinder Make and Model	_____	_____	_____
Cylinder Serial Number	_____	_____	_____
Commissioned by (<i>print name</i>)	_____	Registered Operative ID Number	_____
Company Name	_____	Telephone Number	_____
Company Address	_____		
_____	_____	Commissioning Date	_____

To be completed by the customer on receipt of a Building Regulations Compliance Certificate*:

Building Regulations Notification Number (<i>if applicable</i>)	_____	Sealed	<input type="checkbox"/>	Open	<input type="checkbox"/>	°C	<input type="text"/>
---	-------	--------	--------------------------	------	--------------------------	----	----------------------

ALL SYSTEMS PRIMARY SETTINGS (*indirect heating only*)

Is the primary circuit a sealed or open vented system?	_____
What is the maximum primary flow temperature?	_____

ALL SYSTEMS

What is the incoming static cold water pressure at the inlet to the system?	_____	bar
Has a strainer been cleaned of installation debris (if fitted)?	Yes <input type="checkbox"/>	No <input type="checkbox"/>
Is the installation in a hard water area (above 200oom)?	Yes <input type="checkbox"/>	No <input type="checkbox"/>
If yes, has a water scale reducer been fitted?	Yes <input type="checkbox"/>	No <input type="checkbox"/>
What type of scale reducer has been fitted?	_____	
What is the hot water thermostat set temperature?	_____	°C
What is the maximum hot water flow rate at set thermostat temperature (measured at high flow outlet)?	_____	l/min
Time and temperature controls have been fitted in compliance with Part L of the Building Regulations?	Yes <input type="checkbox"/>	
Type of control system (if applicable)	Y Plan <input type="checkbox"/>	S Plan <input type="checkbox"/>
Is the cylinder solar (or other renewable) compatible?	Yes <input type="checkbox"/>	No <input type="checkbox"/>
What is the hot water temperature at the nearest outlet?	_____	°C
All appropriate pipes have been insulated up to 1 metre or the point where they become concealed	Yes <input type="checkbox"/>	

UNVENTED SYSTEMS ONLY

Where is the pressure reducing valve situated (if fitted)?

What is the pressure reducing valve setting?

bar

Yes ☐

No ☐

Has a combined temperature and pressure relief valve and expansion valve been fitted and discharge tested?

Yes ☐

No ☐

The tundish and discharge pipework have been connected and terminated to Part G of the Building Regulations

Yes ☐

No ☐

Are all energy sources fitted with a cut out device?

Yes ☐

No ☐

Has the expansion vessel or internal air space been checked?

Yes ☐

No ☐

THERMAL STORES ONLY

What store temperature is achievable?

°C

What is the maximum primary flow temperature?

°C

ALL INSTALLATIONS

The hot water system complies with the appropriate Building Regulations

Yes ☐

The system has been installed and commissioned in accordance with the manufacturer's instructions

Yes ☐

The system controls have been demonstrated to and understood by the customer

Yes ☐

The manufacturer's literature, including Benchmark Checklist and Service Record, has been explained and left with the customer

Yes ☐

Commissioning Engineer's Signature

Customer's Signature

To confirm satisfactory demonstration and receipt of manufacturer's literature)

*All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

Viessmann - 5366822



www.centralheating.co.uk

Service Record

It is recommended that your hot water system is serviced regularly and that the appropriate Service Record's completed.

Service Provider

Before completing the appropriate Service Record below, please ensure you have carried out the service as described in the manufacturer's instructions.

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service Record

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Service 1

Date

Engineer Name

Company Name

Telephone No

Comments

.....

.....

Signature

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Notes

[illegible]

JOULE IE

Unit 407 NW Business Park,
Cappagh Road, Ballycoolin,
Blanchardstown, Dublin

tel +353 (1) 623 7080
fax +353 (1) 626 9337
mail info@joule.ie
web www.joule.ie

JOULE PL

Strzegomska 55D,
53-611 Wrocław, Polska
+48 (0) 128811171
+48 (0) 814709046
biuro@joule-pl.pl
www.joule-pl.pl

tel
fax
mail
web

JOULE UK

Unit 1 & Unit 3,
Leftfield Park, Park Road, West Yorkshire,
WF8 4PS, United Kingdom

tel +44 (0) 330 808 8488
fax +44 (0) 1513 568 336
mail info@jouleuk.co.uk
web www.jouleuk.co.uk

tel
fax
mail
web



INS-JUKCYL-019